






SINGLE PART INSTALLATION POSITION







CONTENTS

SENSOR	2-2	SOLENOID VALVE	2-5
RELAY	2-4	EARTH CABLE	2-5
ECU	2-5	EARTH	2-6

SENSOR






Name	Symbol	Name	Symbol
Air flow sensor <4G93-MPI>	E	Ignition failure sensor <4G93-MPI>	B
Camshaft position sensor <4G93-MPI>	C	Oxygen sensor (Front) <4G93-MPI>	H
Crank angle sensor	G	Oxygen sensor (Rear) <4G93-MPI>	I
Detonation sensor	F	Throttle position sensor <4G93-MPI>	A
Engine coolant temperature sensor <4G93-MPI>	D	Vehicles speed sensor	J

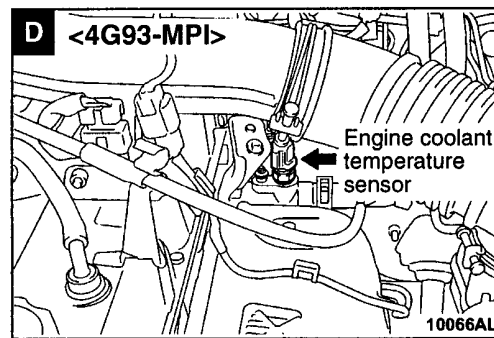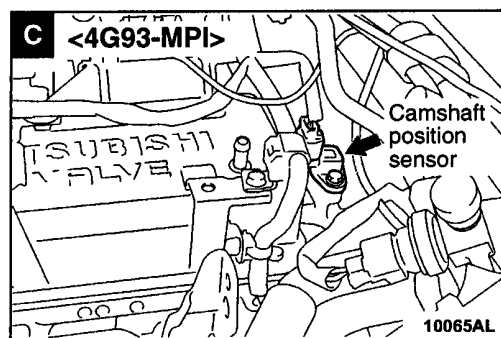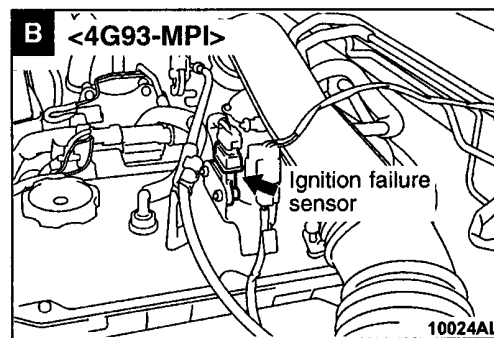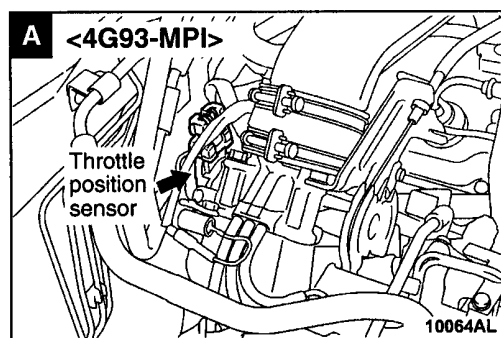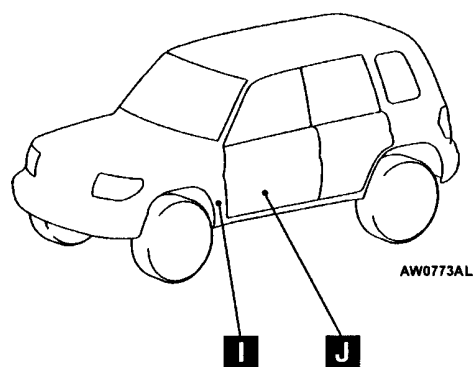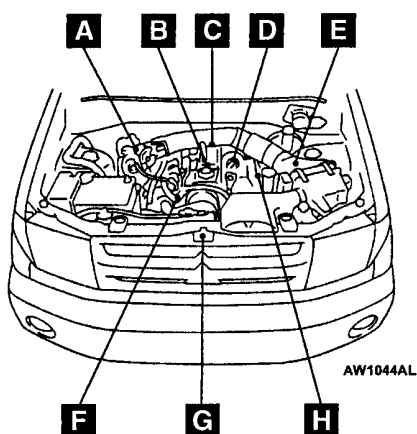

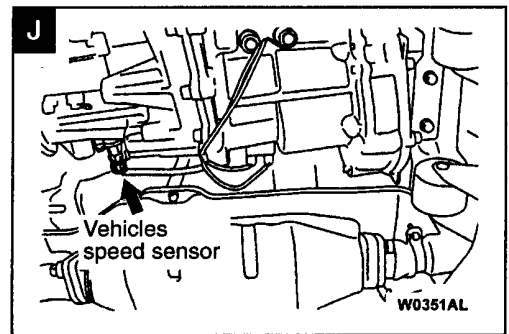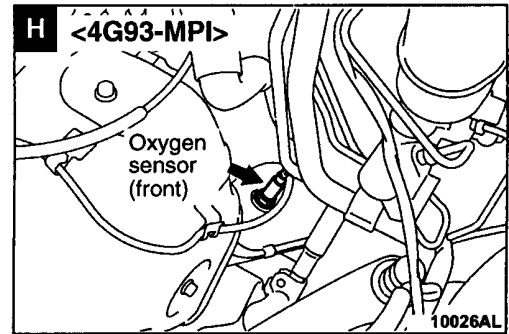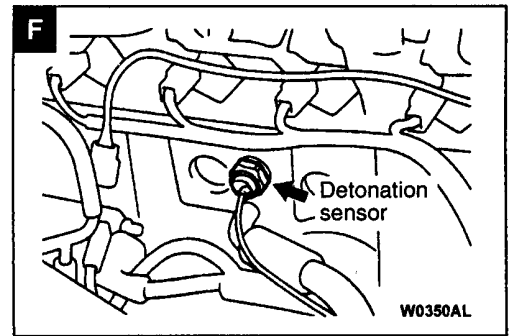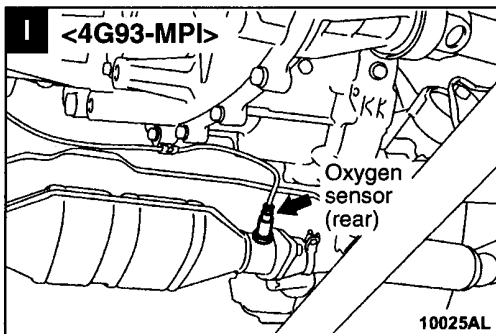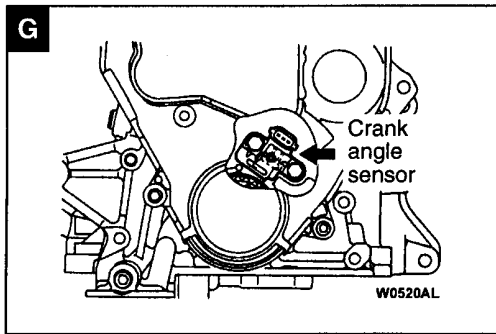
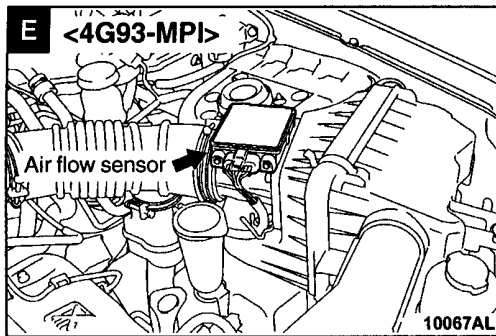


RELAY



Name	Symbol	Name	Symbol
Condenser fan relay <4G93-MPI>	A	Power window relay	B
Engine control relay	A	Power window relay 2	B
Fuel pump relay	A	Radiator fan relay <4G93-MPI>	A

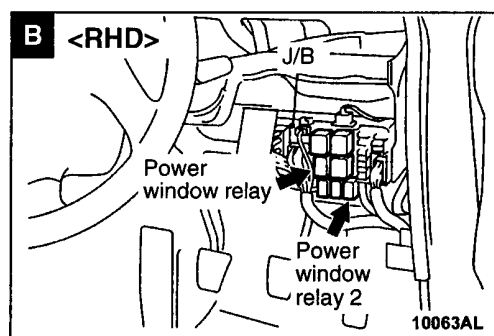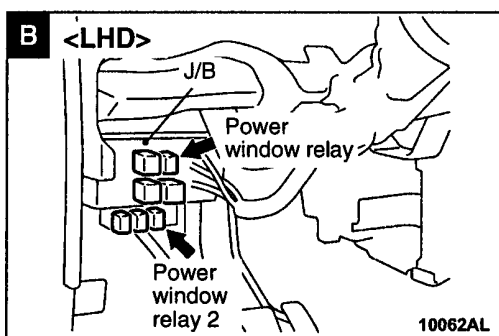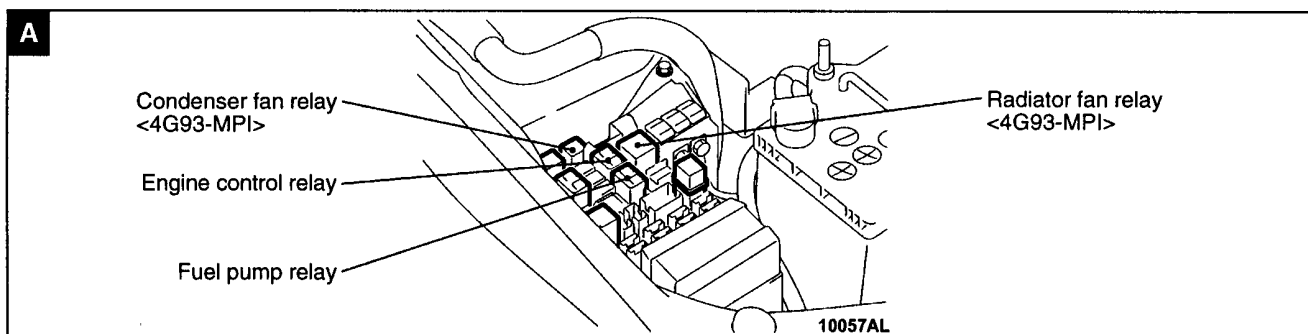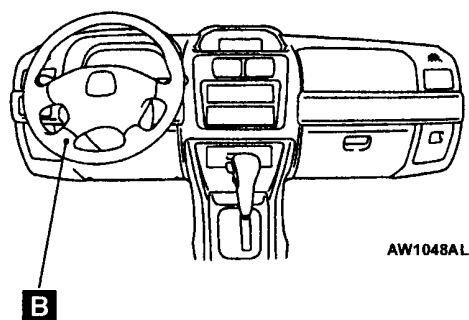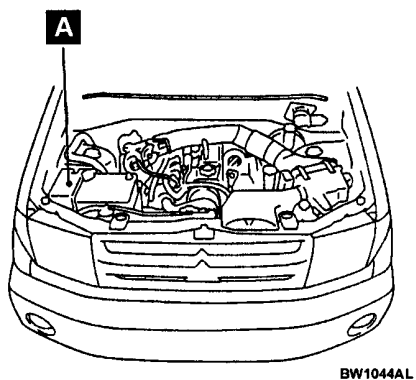



ECU

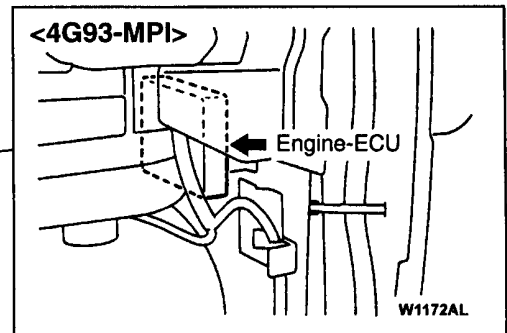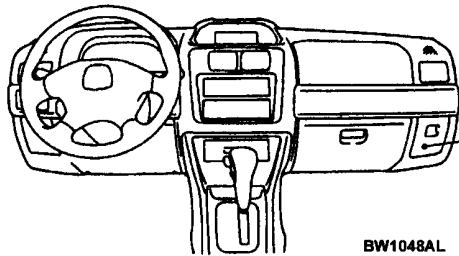

SOLENOID VALVE

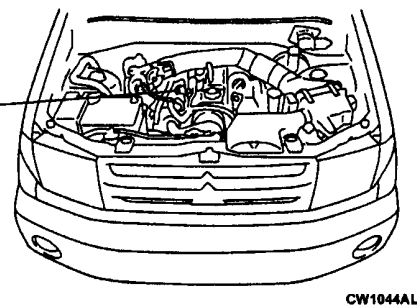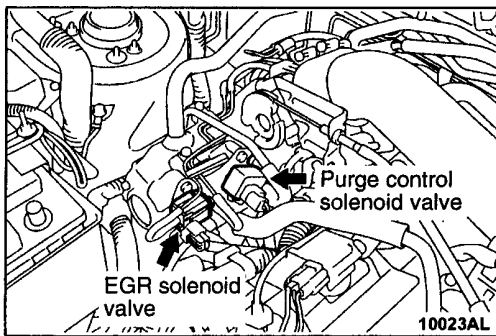

EARTH CABLE

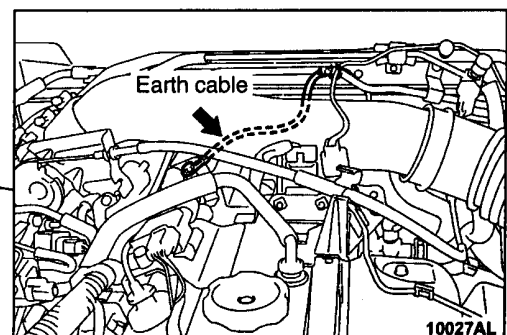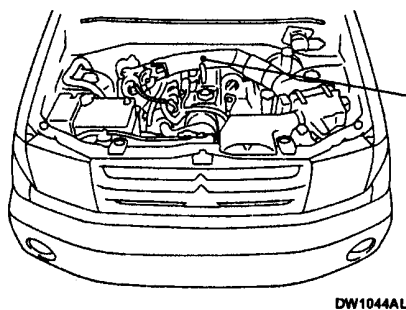

EARTH

